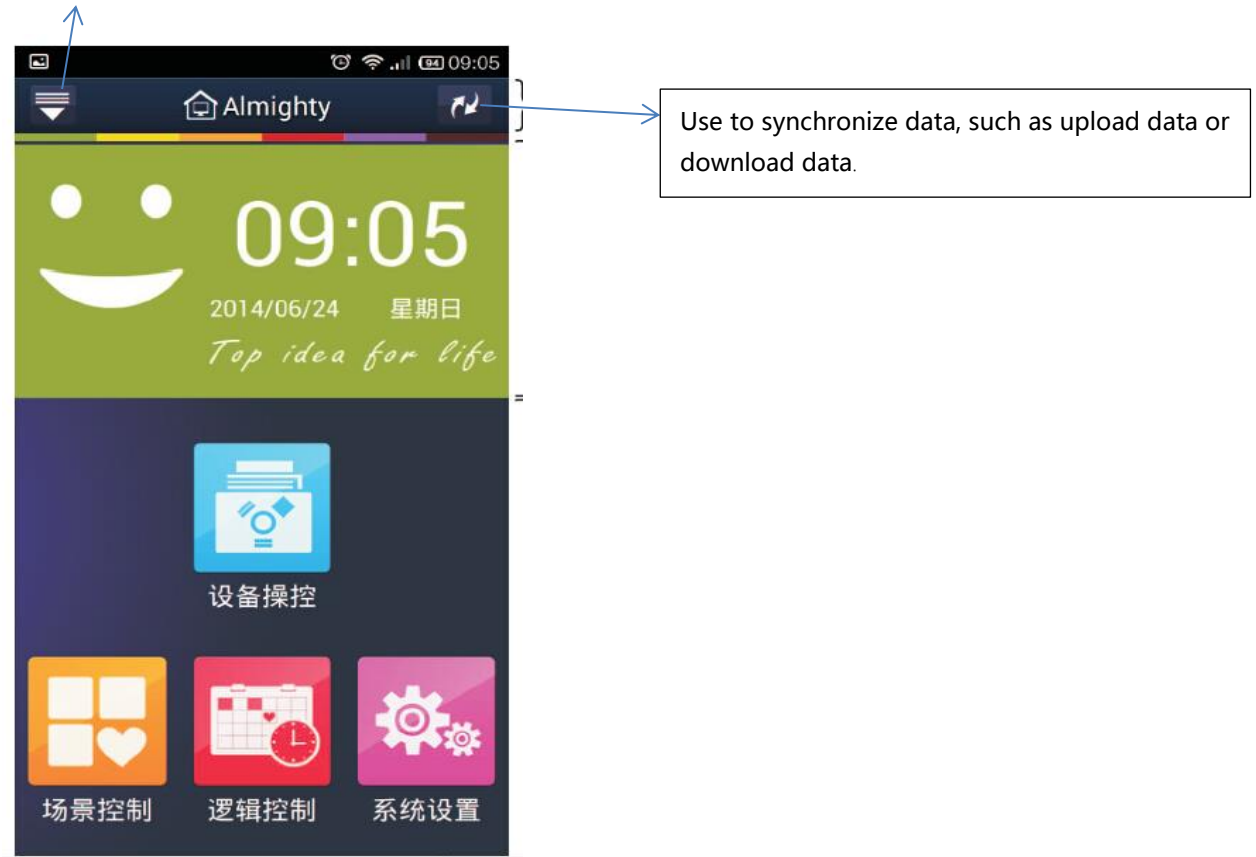This icon means if there are several Almighty Controllers, you can click this icon to choose which Almighty Controller you want control at present.

Use to synchronize data, such as upload data or download data.

" "

Means local control, this mode you can upload and download data.

" "

Means remote control

" "

Means not available, fail to connect to Almighty Controller.

Brief Operation of Almighty Controller

DEVICE:

1. Connect Almighty Controller equipment to router after connecting to electricity

2. Connect to router's Wi-Fi

3. Open Almighty Controller's APP, move to "Setting", choose "Controller",

Click "Search" to search out the controller and "Add" it into control.

4. Enter into "Device", add those devices you want to control. The operation can refer to devices' user manual. Basically, KOTI light switch, curtain switch, socket, etc. are mainly RF devices, when "Add", please choose "Register RF device" and then register those devices as their user manual.

    As to those devices using their own remote control, they are infrared devices, when "Add" please choose "Add remote".

5. After finishing registering those devices, you can use your APP to control them.

SCENE

You can choose those devices you want to set a scene you light, for example all on, all off, or a party scene which just want some devices on and others off. You can set it freely.

LOGIC

This function will make some devices automatically perform as you set in a certain period.

Please note that after set logic; please click on the homepage to Upload data. Then almighty controller can have that memory to regularly perform you logic setting in a certain period.